

WT 182



What do I do if my display is blank?

Check the polarity on your battery to make sure it is installed according to the diagram in the battery compartment. Also make sure that you are using a quality alkaline battery. We advise against reloading batteries.



Why is my time incorrect or not displaying at all?


This alarm clock receives a signal from Frankfurt (DCF-77) to set the clock and the calendar to atomic time. Sometimes, due to adverse weather or atmospheric conditions you will not be able to receive a signal immediately. The best way to get a signal is to put your alarm clock in a window facing Frankfurt until you see the tower icon appear. If definitely you are not receiving the signal, wait one night : during the night time there are less atmospheric disturbances.



How do I manually set the time, date and other manual settings ?

In case the clock do not receive the DCF-77 signal, it is possible to manually set time. Proceed as follows :

1. Remove the batteries from the clock and wait until the LCD screen is blank.
2. Insert the batteries back into the projection clock. While all LCD segments are lit up, press and hold the MODE/SET key : the time will start flashing.
3. Press the + or - keys until correct time is displayed. Then press the MODE/SET key to go to minute setting.
4. Minutes are flashing. Press the + or - keys until correct minutes are displayed. Then press the MODE/SET key to go to time zone setting.
5. Time zone is flashing. Press the + or - keys until correct time zone is displayed. Then press the MODE/SET key to go to the language choice (German GR - English EN - French FR - Italian IT - Spanish ES - Netherlander NE or Danish DA). Then press the MODE/SET key to go to month setting.
6. Month is flashing. Press the + or - keys until correct month is displayed. Then press the MODE/SET key to go to date setting.
7. Date is flashing. Press the + or - keys until correct date is displayed. Then press the MODE/SET key to leave manual settings menu.

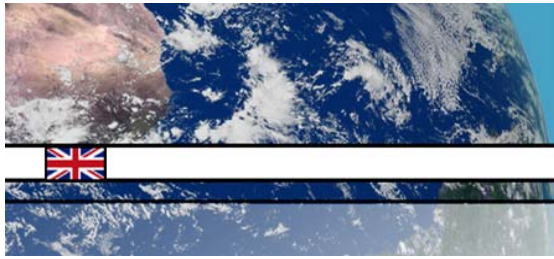

FAQ



LA CROSSE[®]
TECHNOLOGY



How do I set the alarm?

Once the DCF-77 time signal is received or the time has been manually set, proceed as follows to set the alarm :

1. Press the MODE/SET key until the alarm time is displayed.
2. Press then for 3 seconds the MODE/SET key : alarm time will flash. Use the + or - keys to set the time alarm.
3. Press then the MODE/SET : minutes are flashing. Use the + or - keys to set the minutes.
4. Then, press once the MODE/SET key and return to main display.

The SNOOZE/LIGHT button can be used, while alarm is sounding, to stop for 5 minutes the sounding. It automatically sound again after 5 minutes.

To stop definitively the alarm sounding, just press on any other key.



How can I change the display mode?

Press shortly the MODE/SET key in order to have consecutively displayed :

- Time and seconds
- Time and date
- Alarm time