 




Features:

- ▶ DCF Radio control time function
- ▶ Perpetual Calendar Up to Year 2099
- ▶ Day of week in 7 languages user selectable: English, German, Italian, French, Spanish, Netherlands and Danish
- ▶ Time in optional 12/24 hour format
- ▶ Daily Alarm Function
- ▶ Automatic snooze function (OFF or 5~60min)
- ▶ The moon phase display
- ▶ Barometric pressure:
 - Barometric pressure measurement ranges: 600hPa/mb (17.72inHg) to 1100hPa/mb (32.50inHg)
 - Pressure alternatively in hPa/mb or inHg
- ▶ Humidity: Indoor & Outdoor measurable range: 20%RH ~ 95%RH
- ▶ Temperature:
 - Indoor temperature measurement ranges: -9.9°C (15°F) to 50°C (122°F)
 - Outdoor temperature measurement ranges: -20°C (-4°F) to 60°C (140°F)
 - Temperature alternatively in °C or °F.
 - Outdoor thermometer and frost alert
- ▶ Minimum/maximum display for air humidity and temperature
- ▶ Wireless Outdoor Sensor:
 - Wall Mount or Table Stand
 - One Wireless Thermo Sensor Included
 - 433.92MHz RF transmitting frequency
 - 60 meters transmission range in an open area
- ▶ The weather forecasting function
- ▶ Power Supply:
 - Weather Station:
 - Battery: 2 x LR6 AA (not included)
 - Dimensions : 148.3 x 85 x 44.4 mm
 - Power Adapter: DC5V 600MA
 - Wireless Outdoor Sensor:
 - Battery: 2 x LR03 AAA (not included)

Weather Station Appearance

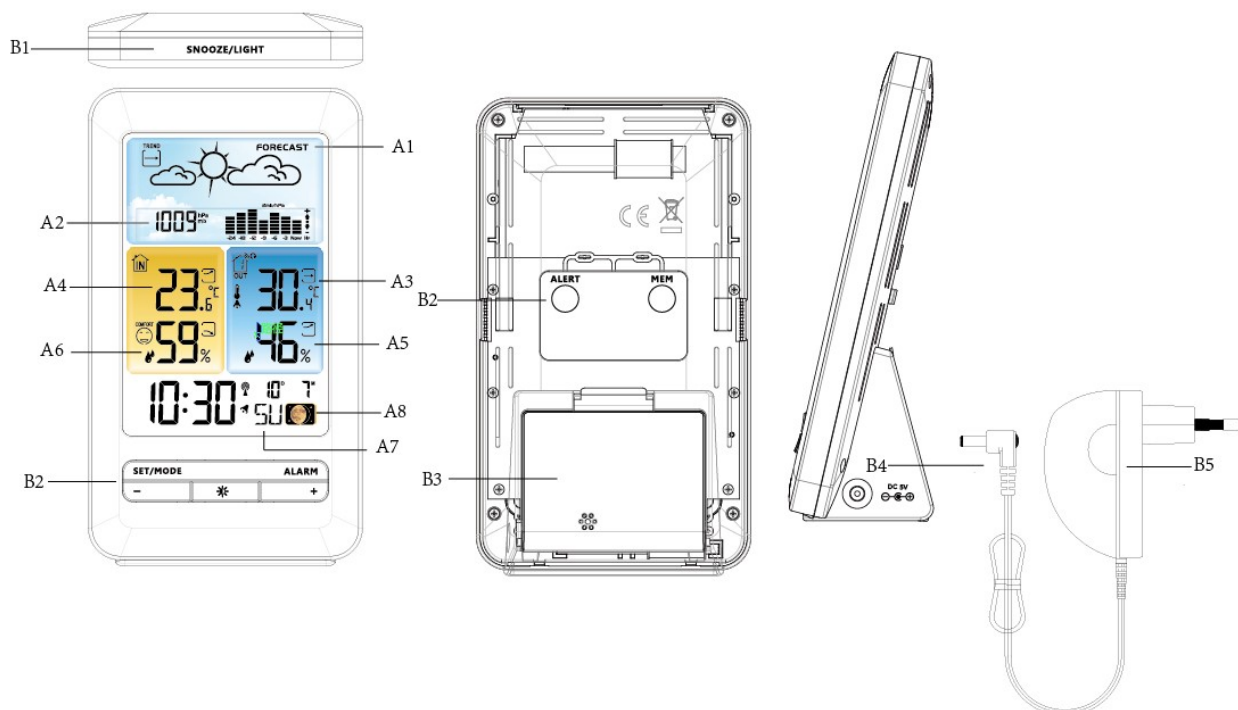 


Part A-Positive LCD

- A1: Weather Forecasting,
- A2: Barometric pressure
- A3: Outdoor Temperature
- A4: Indoor Temperature
- A5: Outdoor Humidity
- A6: Indoor Humidity
- A7: Time/Calendar or Alarm time/ Week
- A8: Time Moon Phase

Part B – Back button and power

- B1: “SNOOZE/LIGHT” touch field
- B2: Keypad
- B3: Battery compartment
- B4: Power supply socket
- B5: Mains adapter

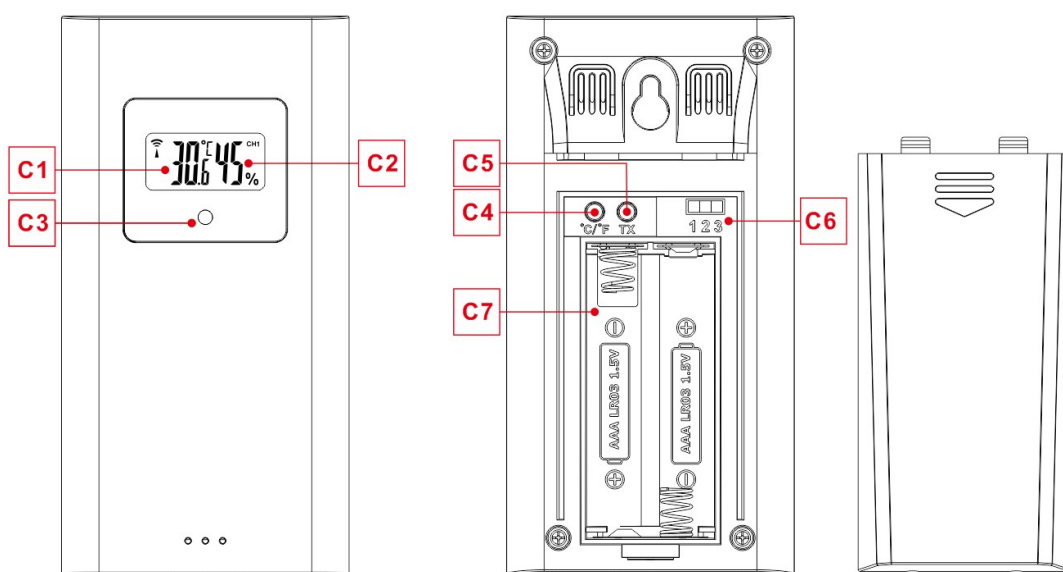

Part C –Wireless Remote Sensor:

C1: LCD display – Temperature

C2: LCD display – Humidity

C3: Transmit signal LED

C4: “°C/°F” button

C5: “TX” button

C6: “CHANNEL 1 or 2 or 3” switch

C7: Battery compartment

WS6212 User Manual

Initial operation:

- ▶ Open Weather Station battery compartment cover
- ▶ Insert 2 x AA batteries observing polarity [“+” and “ –“ marks] and connect DC adapter.
- ▶ When you insert the batteries, all the icon on the LCD display will briefly light up for 3 seconds, and you will hear a beep tone, and detect indoor temperature & humidity.
- ▶ The Weather Station will now start to make a connection to the outdoor remote sensor. This operation takes about 3 minutes and is displayed by a flashing reception RF antenna symbol in the “OUTDOOR” display area on the receiver.
- ▶ This now, open Wireless Outdoor Sensor battery compartment cover. Insert 2 x AAA batteries observing polarity [“+” and “–“ marks]
- ▶ After receiver has created a connection to the outdoor remote sensor, it will then enters the Radio control time receive mode.

Reception of the Radio signal:

- ▶ The clock automatically starts the **DCF** signal search after 7 minutes of any restart or changing of new fresh batteries. The radio mast icon starts to flash.
- ▶ At 1:00 /2:00 / 3:00, the clock automatically carries out the synchronization procedure with the **DCF** signal to correct any deviations to the exact time. If this synchronization attempt is unsuccessful (the radio mast icon disappears from the display), the system will automatically attempt another synchronization at the next full one hour. This procedure is repeated automatically up to total 5 times.
- ▶ To start manual **DCF** signal reception, press and hold down the “+” button for two seconds. If no signals received within 7 minutes, then the **DCF** signal search stops (the radio mast icon disappears) and start again at the next full one hour.
- ▶ During RC reception , to stop searching radio signal, press the “+” button once.

F.Y.I.:

- ▶ A flashing radio mast icon indicates that the **DCF** signal reception has started
- ▶ A continuously displayed radio mast icon indicates that the **DCF** signal was received successfully
- ▶ We recommend a minimum distance of 2.5 meters to all sources of interference, such as televisions or computer monitors
- ▶ Radio reception is weaker in rooms with concrete walls (e.g.: in cellars) and in offices. In such extreme circumstances, place the system close to the window.
- ▶ During the RC receive mode, only the “+” button function, other button operation have no function, If you want

WS6212 User Manual

to carry out other functions of operation, please press “+” button to exit the RC receiving mode.

Manual time setting:

- ▶ Press once “**SET/MODE**” button, can switch the display calendar or second or alarm time
- ▶ Press and hold down the “**SET/MODE**” button for 2 seconds, the unit of temperature display starts to flash. Now use the “+” and “-” button to set the temperature of the unit, the unit of temperature can be set to “°C” or “°F”
- ▶ Press “**SET/MODE**” to confirm your setting, the unit of pressure display starts to flash. Now use the “+” and “-” button to set the pressure of the unit, the unit of t pressure can be set to “hPa” or “inHg”
- ▶ Press “**SET/MODE**” to confirm your setting, the 12/24 hour mode display starts to flash. Now use “+” and “-” buttons to set the correct 12/24 hour mode.
- ▶ Press “**SET/MODE**” to confirm your setting, the RCC icon display starts to flash, Now use “+” and “-” buttons set the RCC receive function to activate(ON) or close(OFF)
- ▶ Press “**SET/MODE**” to confirm your setting, the Time zones start to flash, Now use “+” and “-” buttons set a correct time zone (-12 to +12).
- ▶ Press “**SET/MODE**” to confirm your setting, the Hour display starts to flash. Now use “+” and “-” buttons to set the correct hour.
- ▶ Press “**SET/MODE**” to confirm your setting, the Minute displays starts to flash. Now use “+” and “-” buttons to set the correct minute.
- ▶ Press “**SET/MODE**” button to confirm your setting, the Month and Date icon display starts to flash. Now use “+” and “-” buttons to set the date display on Month/Date or Date/Month.
- ▶ Press “**SET/MODE**” button to confirm your setting, the Year display 2014 starts to flash. Now use “+” and “-” buttons to set the correct year.
- ▶ Press “**SET/MODE**” button to confirm your setting, the Month display starts to flash. Now use “+” and “-” buttons to set the correct month.
- ▶ Press “**SET/MODE**” button to confirm your setting, the Date display starts to flash. Now use “+” and “-” buttons to set the correct date.
- ▶ Press “**SET/MODE**” button to confirm your setting, the language selection for the Weekday displays starts to flash. Now use “+” and “-” buttons to select a language.

Language	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
German, GE	SO	MO	DI	MI	DO	FR	SA
English, EN	SU	MO	TU	WE	TH	FR	SA

WS6212 User Manual



French, FR	DI	LU	MA	ME	JE	VE	SA
Italian, IT	DO	LU	MA	ME	GI	VE	SA
Spanish, SP	DO	LU	MA	MI	JU	VI	SA
Dutch, DU	ZO	MA	DI	WO	DO	VR	ZA
Danish, DA	SO	MA	TI	ON	TO	FR	LO

- ▶ Press “**SET/MODE**” to confirm your setting and to end the setting procedures, enter the clock mode

F.Y.I.:

- ▶ After 20 seconds without pressing any button, the clock switches automatically from Set Mode to Normal Time Mode.
- ▶ There are 7 languages of Weekday: English, German, Italian, French, Spanish, Dutch and Danish.

Setting the daily alarms: ALARM

- ▶ Press once “**ALARM**” button, the display conversion to alarm activation mode, In this mode, press the “**ALARM**” button again to activate the alarm function, which is displayed as "ON", while the alarm icon "” is displayed. Also, in this mode the alarm has been activated, and then press “**ALARM**” button, you can turn off the alarm function, the display show "OFF" and the alarm icon "” does not show
- ▶ Press and hold down “**ALARM**” button for 2 seconds until Alarm Time hour display of the Alarm time starts to flash.
Use the “+” and “-” buttons to set the required hour.
- ▶ Press “**ALARM**” button to confirm your setting, The Minute display of the Alarm time starts to flash. Use the “+” and “-” buttons to set the required minute.
- ▶ Press “**ALARM**” button to confirm your setting, the snooze time of the Alarm starts to flash. Use the “+” and “-” buttons to set the minute of snooze you need.
- ▶ Press “**ALARM**” button to confirm your setting and to end the setting procedure

F.Y.I.:

- ▶ After 20 seconds without pressing any button the clock switches automatically from setting mode to Normal clock mode.
- ▶ The alarm will sound for 2 minutes if you do not deactivate it by pressing any button. In this case the alarm will be repeated automatically after 24 hours.
- ▶ Rising alarm sound (crescendo, duration: 2 minutes) changes the volume 4 times whilst the alarm signal is heard.
- ▶ the snooze time setting range: 5 ~ 60MIN, OFF, when set to OFF, means no snooze function. Snooze time unit is minutes.

Switching off the alarm signal

- ▶ The alarm sound when the trigger, press any button except the “ **SNOOZE/LIGHT** ” button or press hold the “ **SNOOZE/LIGHT** ” button for 2 seconds to stop the alarm signal.

Snooze function:









- ▶ Touch the “ **SNOOZE/LIGHT** ” field or press the “ **SNOOZE/LIGHT** ” button the alarm signal sounds to get to SNOOZE mode. The alarm signal sounds again after already been set.
- ▶ In snooze mode, press any button except the “ **SNOOZE/LIGHT** ” button or press hold the “ **SNOOZE/LIGHT** ” button for 2 seconds to exit the snooze mode.

F.Y.I.:

When the snooze function is set to OFF, the alarm sound when the trigger, press “ **SNOOZE/LIGHT** ” does not have this snooze function.

 
Lunar phases:

- ▶ The weather station has a display which automatically displays the current lunar phase

							
New moon	Waxing half-moon	Half-moon	Waxing full moon	Full moon	Waning full moon	Half-moon	Waning half-moon

Comfort display

- ▶ Indoor comfort level is calculated according to the indoor temperature and humidity, a total of 5 levels.

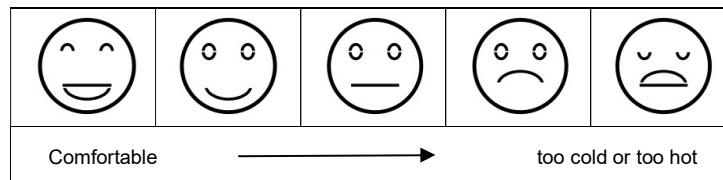




Displaying temperature/humidity/ barometric pressure and temperature/humidity trend

- ▶ The current indoor temperature/humidity/barometric pressure and the temperature/humidity trend (indoors) are shown in the LCD display.

WS6212 User Manual

▶ After successfully connecting with the outdoor sensor, the weather station can display the outdoor temperature/humidity and the temperature/humidity trend (outdoor)


▶ You may see the following displays:

-  The temperature/humidity is rising.
-  The temperature/humidity is remaining constant.
-  The temperature/humidity is falling.

RF Transmission Procedure:

▶ The weather station automatically starts receiving transmission from outdoor thermo sensor for outdoor temperature & humidity after batteries inserted.

▶ The outdoor sensor will automatically transmit temperature and humidity signal to the Weather Station after batteries inserted.

▶ If Weather Station failed to receive transmission from outdoor sensor (“- -”display on the LCD), press and hold “-” button for 3 seconds to receive transmission manually. RF icon “” flashes on the LCD ,The Weather Station to receive the outdoor sensor.

Maximum/Minimum Temperature/Relative Humidity

▶ To toggle indoor/outdoor maximum, minimum temperature and humidity data, press the “**MEM**” button:

Once to show the maximum temperature and humidity values.

Twice to show the minimum temperature and humidity values

Three times to return to the current temperature and humidity levels

▶ To reset the maximum and minimum temperature and humidity, press and hold down the “**MEM**” button about 2 seconds. This will reset all minimum and maximum data recorded to the current displayed values.

F.Y.I.:

▶ *If the temperature reading is below ranges, the **LL.L** will be displayed. If the temperature reading is above ranges, the **HH.H** will be displayed.*

Outdoor Temperature alert setting

▶ Press and hold down the “**ALERT**” button for 2 seconds until the icon for the Temperature Alert” starts to flash



▶ The icon of Upper limit of the Temperature alarm starts to flash. Use the “+” and “-” buttons to set the required

WS6212 User Manual

maximum temperature. Press “**ALERT**” to confirm your setting.

- ▶ The icon of the Lower limit of the Temperature alarm starts to flash. Use the “+” and “-” buttons to set the required minimum temperature. Press “**ALERT**” button to confirm your setting and to end the setting procedure


Temperature and frost alert

- ▶ Press “**ALERT**” button to activate or deactivate the remote temperature alert, When the remote temperature alarm is activated, the temperature alarm icon is displayed in the remote sensor bar
- ▶ When the remote channel temperature value exceeds the set temperature range, will activate the alarm, the weather station will every minute continuous alarm 5 times, at the same time, temperature alarm in alarm icon “” flashes, its temperature value and alarm upper limit icon “Hi” or lower limit icon “Lo” also flashes
- ▶ When the temperature of outdoor sensor is -1°C ($+30^{\circ}\text{F}$) to $+3^{\circ}\text{C}$ ($+37^{\circ}\text{F}$), the frost alarm will be activated, the frost alert icon “” flashing.

F.Y.I.:

 
 
 
 


- ▶ When the temperature is higher than the upper limit of the alarm temperature setting, the activation of the upper limit alarm, symbol “Hi” flashing,
- ▶ When the temperature is lower than the lower limit of the alarm temperature, the lower limit alarm is activated, and the symbol “Lo” flashes

Low battery:

If the battery icon “” appears the batteries in the outdoor sensor should be replaced as soon as possible.

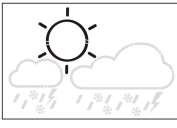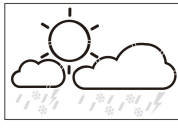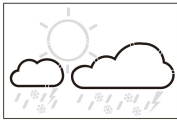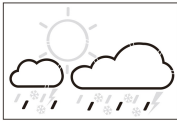


The weather forecast:

- ▶ The weather station calculates a weather forecast for about the next 12 hours based on the barometric pressure trend. Of course this forecast can't compare to that of professional weather services supported by satellites and high performance computers, but merely provides an approximate indication of current developments. Please take the weather forecast from your local weather forecasting service into account as well as the forecast from your weather station. If there are discrepancies between the information from your device and from the local weather forecasting service, please take the advice of the latter as authoritative.
- ▶ The weather station displays the following weather icon:

					
sunny	slightly cloudy	cloudy	rainy	Heavy rainy	Snowy


▶ The weather station can display the barometric pressure trend.

▶ You may see the following displays:

-  The barometric pressure will rise.
-  The barometric pressure will remain constant.
-  The barometric pressure will fall.

Background lighting

▶ If the product is powered by batteries, touch the “ **SNOOZE/LIGHT** ” field or press the “ **SNOOZE/LIGHT** ” button. Backlight lit 15 seconds.

▶ When the power supply of the product is inserted into the power supply adapter, the battery will automatically disconnect the power supply, and the backlight will always be bright. Press the  button to adjust the brightness of the backlight, you can adjust the 4 state: 3 different brightness backlight and close the backlight. When the backlight brightness is not at the maximum brightness, touch the “ **SNOOZE/LIGHT** ” field or press the “ **SNOOZE/LIGHT** ” button. Backlight turns to maximum brightness of 15 seconds.

ABOUT AC/DC POWER SUPPLY

Do not use the device:

- if the power supply or the power cable is damaged,
- in the event of a malfunction,
- if the device has been damaged in any way.

Never use sharp objects to access the inside of the power supply. Do not disassemble the power supply, do not throw it into a fire. Do not attempt to disassemble or modify this product or any of its components. Do not expose the food to high temperatures or direct sunlight. Do not incinerate it. Do not install the power supply near any heat sources, such as a radiator, hot air supply, oven, or other apparatus (including amplifiers) that produce heat. Do not store this product in a place where the temperature exceeds the following range: - 10 to 70 ° C. Do not use this product in a

WS6212 User Manual

location where the temperature exceeds the following range: 0 to 40 ° C, as this may damage it or shorten its life. Do not place the power supply near water or a source of moisture, such as a bathtub, kitchen sink, swimming pool, in a wet basement, or other damp locations. The device must not be exposed to splashes. Do not place objects filled with water, such as vases for example, near the appliance. Connect the power supply into an easily accessible DC outlet. Ensure that the power cord can not be crushed or pinched, particularly at plugs, convenience receptacles, and the point where they are connected to the apparatus. The supplied power supply is intended for indoor use only. Do not place naked flame sources (such as a lit candle) on or near the power supply. Unplug this power during lightning storms or during long periods of non-use to avoid damage. Turn off your device before disconnecting the power cable. This device is not intended for use by people (including children) whose physical, sensory or mental capabilities are reduced, or people without experience or knowledge, unless they could benefit, by the” through a person responsible for their safety, surveillance or prior instructions concerning the use of the device. Children should be supervised to make sure that they do not play with the device. If the power supply works abnormally, and especially if it emits sounds or odors that you think are abnormal, unplug it immediately and have it examined by a qualified repairer. The socket-outlet must be installed near the equipment and must be easily accessible.

LIABILITY DISCLAIMER :

- The electrical and electronic wastes contain hazardous substances. Disposal of electronic waste in wild country and/or in unauthorized grounds strongly damages the environment.
- Please contact your local or/and regional authorities to retrieve the addresses of legal dumping grounds with selective collection.
- All electronic instruments must from now on be recycled. User shall take an active part in the reuse, recycling and recovery of the electrical and electronic waste.
- The unrestricted disposal of electronic waste may do harm on public health and the quality of environment.
- As stated on the gift box and labeled on the product, reading the “User manual” is highly recommended for the benefit of the user. This product must however not be thrown in general rubbish collection points.
- The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.
- This product is designed for use in the home only as indication of the temperature.
- The plug on the power adapter (if included) is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- This product is not to be used for medical purposes or for public information.

WS6212 User Manual

- The specifications of this product may change without prior notice.
- This product is not a toy. Keep out of the reach of children.
- No part of this manual may be reproduced without written authorization of the manufacturer.



RED DIRECTIVE 2014/53/EU

Summary of the Declaration of Conformity: We hereby declare that this wireless transmission device does comply with the essential requirements of RED Directive 2014/53/EU.

LA CROSSE TECHNOLOGY

6 A RUE DU COMMERCE

67118 GEISPOLSHHEIM

FRANCE