
SIZE:455x145mm FRONT

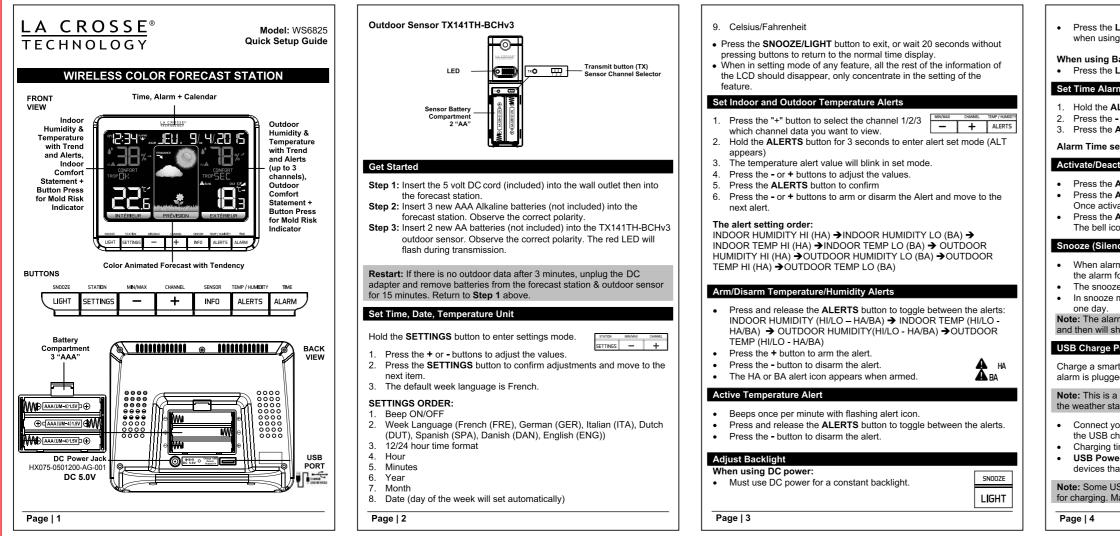

BACK

	ppear in place of rainy an e (Channel 1) is below (0%	
This station learns. Plea	ase allow 3 to 4 weeks for arate personal forecast for	
Forecast Tendency Inc	dicators (Up, Right and	Down Arrows)
TENDANCE Rising Pressure. Weather is Expected to Improve.	TENDANCE Steady Pressure. Weather is Expected to Stay the Same.	TENDANCE Falling Pressure. Weather is Expected to Worsen.
Temperature/Humidity Trend Indicators		
The temperature (1°C/2 every 30 minutes or less	°F) and humidity (3% RH s.) trend indicators update
Temperature has risen in the past 3 hours. Humidity has risen in the past 3 hours. Temperature has not changed in the past 3 hours. Humidity has not changed in the past 3 hours. Temperature has fallen in the past 3 hours. Temperature has fallen in the past 3 hours. Humidity has fallen in the past 3 hours. Temp		
Search for outdoor Se	nsor	
The strength signal	on to search for the outdoo icon will animate until the minutes if no signal availa Y Y	sensor signal
Setup with Multiple outdoor Sensors The forecast station will accommodate up to three outdoor outdoor sensors (TX141TH-BCHv3).		
Page 6		

Press the + button to easily see the temperature and humidity in various locations: outdoors, baby's room, greenhouse, basement, etc. Monitor outdoor temperature in up to 3 locations within a 100 meters $(\,330\,ft)$ wireless range of the forecast station

- To connect multiple outdoor sensors to the forecast station: Remove the battery cover from all the sensors (Leave battery cover off until all sensors are received by the forecast station).
- Set the first outdoor sensor to Channel 1 and insert 2
- AA batteries. 3. Set the **second** outdoor sensor to Channel 2 and insert 2 AA batteries
- Set the third outdoor sensor to Channel 3 and insert 2 AA batteries.
 Press and hold the INFO button on the forecast station for 5 seconds. The forecast station will search for all outdoor INFO
- Press the TX button on each outdoor sensor to transmit RF signal.
- 7. When RF connection is established, the temperature & humidity for each of the selected channels will appear on the main unit. 8. Allow the sensors and the forecast station to stay 2 meters (5-10
- feet) apart for 15 minutes to establish a solid connection
- Install the battery covers on each sensor.
 After 15 minutes place the outdoor sensors in appropriate locations Press and release the + button to view channels 1, 2 or 3 on the
- forecast station

Note: If only one sensor is connected the other channels will show dashes for temperature and humidity.

Low Battery Icon

Page | 7

- Low battery icon indicates low battery for station or sensor. If the icon is displayed in Outdoor Temperature section.
- replace batteries in the outdoor sensor. Low Battery Icon • If the icon is displayed in Indoor Temperature section, replace batteries in the Forecast station

Outdoor Sensor Use and Positioning

Outdoor use: Mount the outdoor sensor on a north-facing wall or in any well shaded area. Under an eave or deck rail is preferr

Indoor use: Mount the outdoor sensor indoors to monitor high mold risk

areas like in a crawl space, attic or a basement. The maximum wireless transmission range to the forecast station is over 100 meters (330 feet) in open air, not including walls or floors.

Outdoor Sens Battery Life: Forecast static Do not mix Alkaline, Standard, Lithium or Rechargeable Battery Backup Alwavs purchase the correct size and grade of battery most suitable TX141TH-BCH for the intended use. Replace all batteries of a set at the same time. Outdoor Sense Dimensions: Clean the battery contacts and also those of the device prior to battery installation.

Be sure the outdoor sensor is mounted vertically

Ensure the batteries are installed with correct polarity (+and -).

Remove batteries from equipment with is not to be used for a

Clean with a soft damp cloth. Do not use solvents or scouring agents

The specs of this product may change without prior notice. Improper use or unauthorized opening of housing voids warranty

If the product is not working properly, change the batteries and/or

0°C to 50°C (+32°F to +122°F)

-40°C to 60°C (-40°F to 140°F

Over 100 meters (330 ft.) RF 433MHz (open air)

5-volt DC 1.2A power adapter (included)

About every 50 seconds

HX075-0501200-AG-001

Remove expired batteries promptly. Do not expose to extreme temperature, vibration or shock.

The product is not a toy. Keep it out of reach of children.

1%-99% (RH)

1%-99% (RH)

Forecast station Care & Maintenance

extended period of time.

check the DC cord connection

Batteries

Indoor

Range:

Interval:

Outdoor

Range:

Distance:

Power:

Temperature

Humidity Range:

Forecast station

DC Adapter No .:

Optional/Battery

Page | 8

Primary DC Power

Temperature

Humidity Range:

Do not mix old and new batteries

Forecast statio TX141TH-BCH

Outdoor Senso LIABILITY DISCL

CAUTION

Optional 3-AAA, IEC, LR3 batteries (not included)

Page | 9

IGHT button to adjust the backlight (Bright/Dim/Turn Off) DC power.	device. Most USB cables included with mobile devices will work for charging.
attery power only: .IGHT button for 10 second backlight (will not stay on).	Indoor/Outdoor Comfort Displays
ARM button to enter set mode. or + buttons to adjust the values. LARM button to confirm & move to the next item. tting order:1. Hours, 2. Minutes ivate Time Alarm LARM button once to view alarm time. LARM button once to view alarm time. LARM button again to activate the alarm. LARM button again to deactivate the alarm. n will disappear.	The indoor comfort display is based on the humidity red by the forecast station. The outdoor comfort display is based on the humidity red by the outdoor sensor(s). The forecast station will display one of these five indicators: CONFORT CONFORT CONFORT TROP SEC TROP SEC TROP HUM TROP HUM 1-25% 26-39% 40-75% 76-83% 84-99% Heat Index/Dew Point/Mold Risk Press the "+" button to select the channel 1/2/3 which channel data you want to view. Then press the INFO button repeatedly to toggle between: Image: Heat Index (outdoor) Image: Heat Index (outdoor) Heat Index (outdoor) Mold Risk (indoor/outdoor) Image: Heat Index (outdoor) Image: Heat Index (outdoor)
The sounds, press the LIGHT button to silence ALARME or 10 minutes. a icon will flash. a or any button except ALARM to stop alarm for	 Outdoor Sensor Channels-Auto Scroll Press the " + " button to select the channel 1/2/3 and auto scroll mode. The forecast station will automatically rotate through the channels for all connected sensors.
n is crescendo sound. The alarm sounds for two minutes ut off completely. ort phone, camera or other devices when the projection d into a power outlet with the included 5V DC adapter.	 Auto scroll icon CH:1 CH:2 CH:3 CH:1 CH:2 CH:3 CH:4 CH:4 CH:2 CH:3 CH:4 CH:4<
power-output charging port. It does not supply power to tion.	View/Reset MIN/MAX Values The station automatically resets minimum and maximum values daily at
ur external device's USB charging cable (not included) to arging port. mes will vary. r Output : 1A maximum current. Charge 1A devices or t are self-regulating.	 midnight (00:00). Press and release the - button to view minimum and maximum values. Hold the - button to manually reset minimum and maximum values. Animated Color Forecast Icons
SB cables are for data transfer only and cannot be used ake sure that the USB cable you use will charge your	Animated color forecast icons Animated forecast icons use changing atmospheric pressure to predict weather conditions for the next 12-hours with 70-75% accuracy.
	Page 5

TX141TH-BCHv3 Outdoor Sensor:	2-AA, IEC, LR6 batteries (not included)	
Battery Life:		
Forecast station Battery Backup:	Battery life is over 24 months when using the DC adapter for primary power	
TX141TH-BCHv3 Outdoor Sensor:	Battery life is over 12 months when using reputable battery brands.	
Dimensions:		
Forecast station:	150 x 42 x 123 mm (5.91" L x 1.66" W x 4.84" H)	
TX141TH-BCHv3 Outdoor Sensor:	40 x 20 x 130mm (1.57"L x 0.79"W x 5.12"H)	
LIABILITY DISCLAIMER		

 The electrical and electronic wastes contain hazardous substances The electrical and electronic waste in wild country and/or in unauthorized grounds strongly damages the environment.
 Please contact your local or/and regional authorities to retrieve the

- addresses of legal dumping grounds with selective collection
- All electronic instruments must from now on be recycled. User shall take an active part in the reuse, recycling and recovery of the electrical

and electronic waste.
The unrestricted disposal of electronic waste may do harm on public health and the quality of environment.
As stated on the gift box and labeled on the product, reading the "User

inaccurate reading take place. This product is designed for use in the home only as indication of the temperature. The plug on the power adapter (if included) is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.
 This product is not to be used for medical purposes or for public information.

The specifications of this product may change without prior notice.
This product is not a toy. Keep out of the reach of children.

No part of this manual may be reproduced without written authorizatio of the manufacturer.

Risk of fire or explosion or defeat the safeguard of equipment if the battery is replaced by an incorrect type. Replace only with the same or equivalent type. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion. High or low extreme temperatures or low air pressure at high altitude that the battery can be subjected to during use, storage or transportation. Leaving the battery in an extremely high temperature and/or low high air pressure surrour environment that can result in an explosion or the leakage of flammable liquid or gas.

ABOUT AC/DC POWER SUPPLY

Do not use the device

- · if the power supply or power cable is damaged,
- in case of malfunction,
 if the device has been damaged in any way.

 In case of manufacturit,
 If the device has been damaged in any way.
 Never use sharp objects to access the inside of the power supply. Do not disassemble the power supply, do not throw it into a fire. Do not attempt to disassemble or modify this product or any of its components. Do not expose the power supply to high temperatures or direct sunlight. Do not incinerate it. Do not install the power supply near any heat sources, such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Do not store this product in a place where the temperature exceeds the following range: 0 to 40 ° C, as this may damage it or shorten its life. Do not place the power supply near water or a source of moisture, such as a bathtub, washbasin, kitchen sink, swimming pool, wet basement, or other damp locations. The device must not be exposed to splashing. Do not place objects filled with water, such as vases, near the unit. Plug the power supply is intended for indoor use only. Do not place naked flame sources (such as a lit candle) on or near the power supply. Unplug this power during lightning storms or when unused for long periods of time to prevent damage. Turn off your device before unplugging the power cable. This device is not intended for use by persons (including nighter) whose physical, sensory or mental capabilities are reduced, or persons without experience or knowledge, unless they have been intermediary of a person responsible for their safety, surveillance or prior instructions concerning the use of the device. Children should be supervised to make sure they do not play with the device. If the power supply is operating abnormally, particularly if it emits sounds or odors that you think are abnormal, unplug it immediately and have it inspected by a qualified service person. The socket outlet must be installed near the equipment and must be easily



Directive RED 2014/53/EU Summary of the Declaration

ration of Conformity : We hereby declare that this wireless on device does comply with the essential requ ements of Directive RED 2014/53/EU

LA CROSSE TECHNOLOGY 6A RUE DU COMMERCE 67118 GEISPOLSHEIM - FRANCE

Page | 10