

# SIZE:650x140mm

 
## FRONT

LA CROSSE®  
TECHNOLOGY

### WI-FI PROJECTION

### ALARM CLOCK WITH FORECAST

AccuWeather

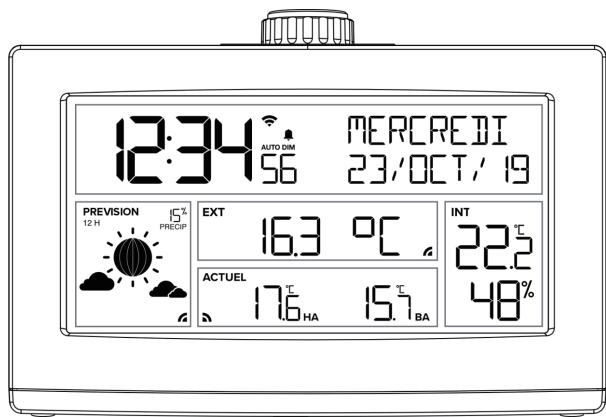


Model: WS6837

#### STEP 1:
 
##### POWER UP ALARM CLOCK


- Insert the power cord into an outlet, then into your Alarm Clock.
- Remove the battery insulation tab installed on the bottom of your clock.

Projection Alarm Clock  
WS6837

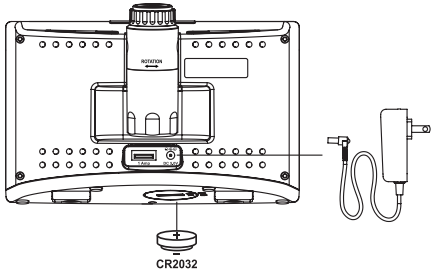


**Standalone:** When first powered up, your clock will show the default Nap Time, Comfort Statement, indoor temperature and humidity & Moon Phase

 **Connected:** Once connected to the La Crosse View™ app, these will change to display your AccuWeather: Outdoor Temperature, Daily HI & LO Temperatures, Forecast Icons, and Chance of Precipitation values.

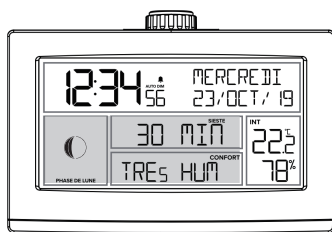

Standalone

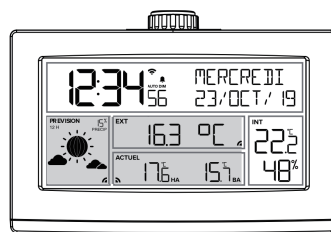 

Connected to the  
La Crosse View™ App

#### STEP 2:

##### CONNECT TO THE LA CROSSE VIEW™ APP



##### DOWNLOAD

Visit the App Store or Google Play Store to download the free La Crosse View™ app onto your mobile device.



##### LAUNCH & FOLLOW

Open the La Crosse View™ app and follow the on-screen instructions.

##### GET YOUR STATION READY

Ensure your station's Wi-Fi Indicator is flashing. If it is not, press and hold the Plus (+) and Minus (–) button down together until it begins flashing. This tells you that your station is ready to connect.

##### HAVING TROUBLE CONNECTING?


Make sure your mobile device is connected to your router's 2.4GHz Wi-Fi network, and that you've correctly entered your Wi-Fi password.

#### BENEFITS OF CONNECTING TO LA CROSSE VIEW™

Feature	Standalone	Connected
Customizable Projection Image	✓	✓
Programmable Snooze	✓	✓
Remote Alarm Setting	✓	✓
Nap Timer	✓	✓
Indoor temperature and humidity	✓	✓
Comfort Level	✓	✓
Moon Phase	✓	✓
Internet Time & Calendar		✓
Outdoor Temperature		✓
Advanced Forecast Icons		✓
Daily Forecast His & Los		✓
% Chance of Precipitation		✓
Ability to Add Sensors	✓	✓
Data Stream Technology		✓

##### ACCUWEATHER FORECASTS

Enjoy colorful Weather Icons and Chance of Precipitation values when connected with La Crosse View™. These icons will indicate future weather conditions for your location in place of the original Moon Phase feature.

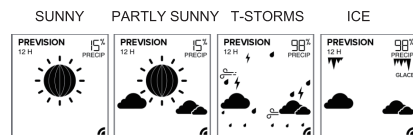 

#### STEP 3 (OPTIONAL):

##### STANDALONE BASIC SETTINGS

##### SETTINGS MENU

- Hold the REG. button for 3 seconds to enter the Settings Menu.
- Press the + or – button to adjust the values.
- Press the REG. button to confirm and move to the next item.
- Press the SNOOZE/ECLAIRAGE button at any time to exit settings.

##### Settings menu order:

- Bonjour
- Language (French, English, Spanish, German)
- 12HR/24HR Format
- Hour
- Minutes
- Year
- Month
- Date
- Date/Month or Month/Date
- Celsius/Fahrenheit
- Merci

**Language:** Whichever language is selected; the following instructions and weekday will be presented in that language.

**Weekday:** The Weekday will set automatically when your Year, Month and Date are set.

**Note:** If you have connected to the La Crosse View™ app, time & date will automatically update from the Internet.

 
##### TIME ALARM

- Hold the ALARME button until the Alarm Hour begins to flash.
- Press the + or – button to adjust values, hold to adjust quickly.
- Press ALARME button to confirm and move to the Alarm Minutes. Use the + or – button again to adjust.
- Press ALARM to confirm and move to your Snooze Duration.
- Use the + or – button to adjust Snooze Duration in 5 minute intervals up to 120 minutes.
- Press the ALARME button to confirm and activate the alarm.

**Note:** When connected, it often is easier and more convenient to set and adjust alarms in the La Crosse View app.

Alarm is crescendo sound. When the alarm sounds, it continues for 2 minutes and then shuts off completely.

##### Activate/Deactivate Alarm:

- Press the ALARME button to view your alarm time, with alarm time showing, press the ALARME button again to activate or deactivate your Time Alarm.
- Your Alarm Indicator  will show when active and disappear when deactivated.
  - Alarm Indicator will flash when alarm sounds.
  - Press any button except the SNOOZE/ECLAIRAGE button to stop a sounding alarm for one day.

##### Snooze:

- When alarm sounds, press the SNOOZE/ECLAIRAGE button to activate the Snooze function. "SNOOZE" and your selected duration will show and begin to count down.
- Press any button besides the SNOOZE/ECLAIRAGE button to exit out of Snooze mode.

##### NAP

- Hold the SIESTE button for 3 seconds to enter Nap Settings.
- The time will flash and start at the pre-set time of 30 minutes. The date area will read "SIESTE"
- Press + or - buttons to set nap duration. Increase or decrease in 5 minute intervals up to 120 min.
- Press the SIESTE button to confirm.

- To start a nap, press the SIESTE button and duration will count down to zero. At the end of the count down, the alarm will sound.
- When alarm sounds, SIESTE "om oo" will flash. Alarm beeps for 2 minutes then returns to normal display or press any button to stop ringing and return to normal display.
- During NAP count down, press any button except for SNOOZE/LIGHT button to exit count down.
- During NAP count down, press SNOOZE/LIGHT button only to change the backlight.

##### ADJUSTABLE BACKLIGHT

Press the ECLAIRAGE button to adjust your backlight intensity from OFF to full brightness (5 levels).

##### AUTO DIM

Program your alarm to automatically dim during preselected times.

- Hold the SNOOZE/ECLAIRAGE button to enter Auto Dim Settings.
- Press + or - buttons to adjust.
- Press the SNOOZE/ECLAIRAGE button to confirm and exit. When active the words AUTO DIM will show by the time.

##### Auto Dim Order:

- Auto Dim OFF/ON
- Auto Dim Start Time (Hour only)
- Auto Dim Stop Time (Hour only)

## BACK

#### PROJECTION OPTIONS

Press the PROJ INFO button to select projected data.

 
##### Options:

- Current Time (Default)
- Indoor Temperature & Humidity
- Outdoor Temperature (when connected)
- Extra Sensor Info (if an extra sensor is connected to your alarm).


**Projection Angle:** Tip the Projection Arm forward or backward to adjust projected image location.

**Projection Rotation:** Rotate the bottom of the Projection Arm to customize the rotation angle of your projected image up to 270°.

**Projection Intensity:** Press and release the  button to adjust the Projection Intensity (HI-MED-LO-OFF). Projection level will show briefly on the display.

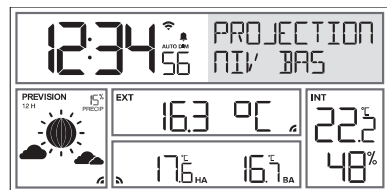

Projection Intensity

 

Projection Arm

##### WIFI STATUS

Press the REG. button to quickly view your Wi-Fi Status.

 
**ALLOKCONNECTED:** Alarm Clock is connected to your Wi-Fi and its data should be available in your La Crosse View app.

**CHECK APP:** Check you La Crosse View app for notifications.

**LOST WIFI:** Check your router and network connections.


**NOWEATHERSERVICE:** Weather/Time Service not connecting. This will be resolved at the Weather Server. Please be patient.

#### BUTTONS & FUNCTIONS

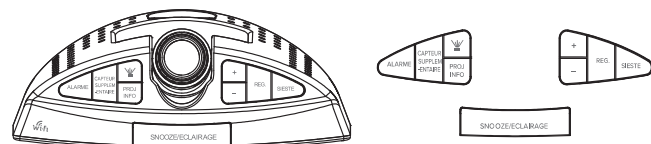



ALARME	Press to activate/deactivate alarm. Hold to set alarm
CAPTEUR SUPPLEMENTAIRE	Press to see options. Hold to add sensors.
PROJ INFO	Press to adjust projection brightness.
+ or -	Press to see options. Hold to alternate projection with time.
REG.	Press to adjust values. Hold both together to search for Wi-Fi signal.
SIESTE	Press to view Wi-Fi Status. Hold for basic settings.
SNOOZE/ECLAIRAGE	Press to start Nap countdown. Hold to set Nap time.
ALARME&SIESTE	Press to adjust backlight. Hold to set Auto Dim time.
	Hold both together to Factory Reset Clock.

 
##### Station and Wi-Fi versions

From a normal display hold the PROJINFO &  buttons together for 2 seconds to view the station Firmware Version for 3 seconds, followed by the Wi-Fi Module Version for 3 seconds

##### LCD ICONS

 Wi-Fi Indicator: Will flash when your station is ready to connect to the Internet and be solid on screen when connected.

 Internet Indicators: Will display in areas to indicate data coming from the Internet.


 Low Battery Indicator: Will let you know when to replace your alarm's backup coin cell battery.

 Alarm Indicator: Indicates an active time alarm.

##### ADD-ON SENSORS

Whether you choose to connect with the La Crosse View app or not, this clock has the ability to display data for up to 4 additional sensors.

##### ADD EXTRA SENSORS TO YOUR ALARM CLOCK

- Hold the CAPTEUR SUPPLEMENTAIRE button until you see the Sensor Reception  Indicator start to animate.
- Install batteries into your sensor. If it has a TX button press it to force a transmission signal.

- Your sensor should connect within the next 3 minutes, briefly displaying its ID and type. The Sensor Reception Indicator will show solid on screen when a sensor is connected.
- Press the CAPTEUR SUPPLEMENTAIRE button to cycle through the data you'd like displayed on screen.
- To add sensors to your La Crosse View app, watch this video [bit.ly/LaCrosseView\\_Support\\_Vid\\_10](https://bit.ly/LaCrosseView_Support_Vid_10)

**Note:** When first powering up, or after a factory restart, extra sensors should automatically connect with your display.

##### Delete Extra Sensors on Station:

- Press and release the CAPTEUR SUPPLEMENTAIRE button to view sensor type and ID.
- Hold the - button to delete the sensor from the station.
- Sensor will still pass through to app.
- Deleted sensor can no longer show on station or projection.

##### Charging Function

There is a 1 Amp USB charge port on the back of the station. Power Cord must be in use to charge a device.

- Connect your external device's USB charging cable (not included) to the USB charging port.
- Charging times will vary.
- USB Power Output: 1A maximum current. Charge 1A devices or devices that are self-regulating.

##### Indoor Comfort Indicator –Only shows when not connected

The Indoor Comfort Indication will only be available if the customer **does not connect** to the La Crosse View App. Once connected that area will show Internet Forecasted HI/LO temperatures. This is based on the Indoor Humidity readings.

##### Indoor Comfort:

- TOO WET 84% to 99% RH
- IN WET 71% to 83% RH
- IN OK 40% to 70% RH
- IN DRY 26% to 39% RH
- TOO DRY 1% to 25% RH

##### Moon Phase- Only shows when not connected

The moon phase is based on the Lunar Calendar and the year, month and date set with 12 icons. The moon phase is only available if the station is not connected to the app.

#### WARNING:

- This product contains a button battery.
- If swallowed, it could cause severe injury or death in just 2 hours.
- Seek medical attention immediately.

##### WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
- If you suspect your child has swallowed or inserted a button battery, immediately seek urgent medical assistance.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened.
- Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Tell others about the risk associated with button batteries and how to keep their children safe.

##### SUPPORT

For customer support visit:

<http://en.lacrossetechnology.fr/contact.php>

<http://www.lacrossetechnology.fr/contact.php>

##### LIABILITY DISCLAIMERS

- The electrical and electronic wastes contain hazardous substances. Disposal of electronic waste in wild country and/or in unauthorized grounds strongly damages the environment.
- Please contact your local or regional authorities to retrieve the addresses of legal dumping grounds with selective collection.
- All electronic instruments must from now on be recycled. User shall take an active part in the reuse, recycling and recovery of the electrical and electronic waste.
- The unrestricted disposal of electronic waste may do harm on public health and the quality of environment.
- As stated on the gift box and labeled on the product, reading the "User manual" is highly recommended for the benefit of the user. This product must however not be thrown in general rubbish collection points.
- The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.
- This product is designed for use in the home only as indication of the temperature.
- The plug on the power adapter (if included) is intended to serve as the disconnect device, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- This product is not to be used for medical purposes or for public information.
- The specifications of this product may change without prior notice.
- This product is not a toy. Keep out of the reach of children.
- No part of this manual may be reproduced without written authorization of the manufacturer.

#### ABOUT THE AC / DC SECTOR ADAPTER:

Do not use the device:

- If the power supply or the power cable is damaged, in the event of a malfunction.
  - If the device has been damaged in any way.
- Never use sharp objects to access the inside of the power supply. Do not disassemble the power supply, do not throw it into a fire. Do not attempt to disassemble or modify this product or any of its components. Do not expose the food to high temperatures or direct sunlight. Do not incinerate it. Do not install the power supply near any heat source, such as a radiator, hot air supply, oven, or other apparatus (including amplifiers) that produce heat. Do not store this product in a place where the temperature exceeds the following range: -10 to 70 °C. Do not use this product in a location where the temperature exceeds the following range: 0 to 40 °C, as this may damage it or shorten its life. Do not place the power supply near water or a source of moisture, such as a bathtub, sink, kitchen sink, swimming pool, in a wet basement or other damp location. The device must not be exposed to splashes. Do not place objects filled with water, such as vases for example, near the appliance. Connect the power supply to an easily accessible DC outlet. Ensure that the power cord cannot be crushed or pinched, particularly at plugs, convenience receptacles, and the point where they are connected to the apparatus. The supplied power supply is intended for indoor use only. Do not place naked flame sources (such as a lighted candle) on or near the power supply. Unplug this power supply during lightning storms or during long periods of non-use to avoid damage. Turn off your device before disconnecting the power cable. This device is not intended to be used by people (including children) whose physical, sensory or mental capacities are reduced, or people without experience or knowledge, unless they could benefit, by the " through a person responsible for their safety, supervision or prior instructions concerning the use of the device. Children should be supervised to make sure that they do not play with the device. If the power supply works abnormally, and especially if it emits sounds or odors that you think are abnormal, unplug it immediately and have it examined by a qualified repairer.

The socket-outlet must be installed near the equipment and must be easily accessible.



##### RED DIRECTIVE 2014/53/EU

Summary of the Declaration of Conformity: We hereby declare that this wireless transmission device does comply with the essential requirements of RED Directive 2014/53/EU.

LA CROSSE TECHNOLOGY

6 A RUE DU COMMERCE

67118 GEISPOLSHEIM

FRANCE