 


BLUETOOTH ALARM CLOCK

 


BUTTONS

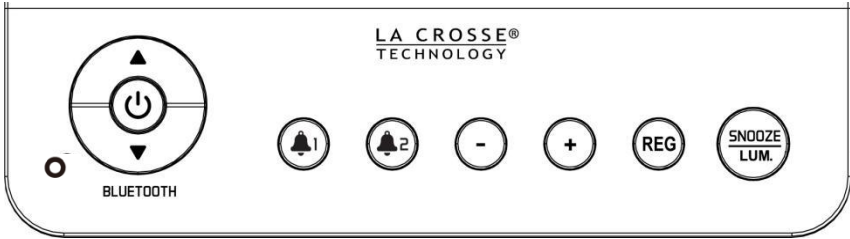

FRONT VIEW

BACK VIEW

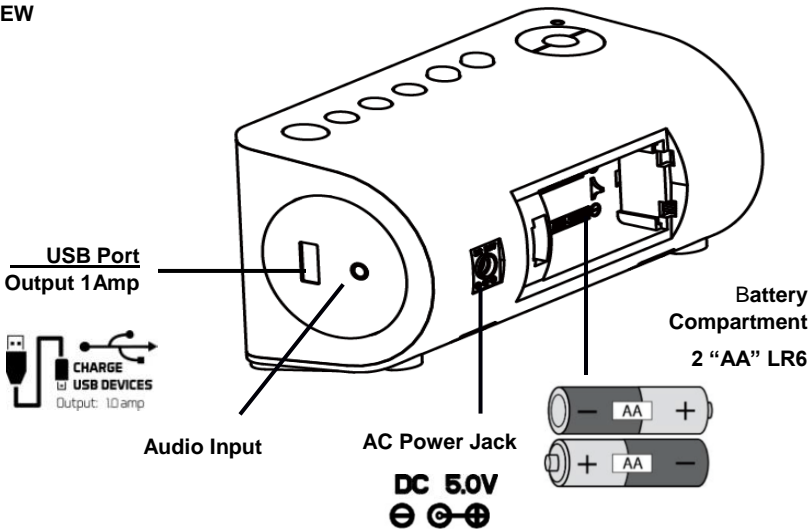

Get Started

Step 1: Insert 5 volt AC adapter into the wall then into the back of the alarm clock.

Step 2: Insert 2 A A LR6 Alkaline batteries (not included) into the alarm clock. Observe the correct polarity.

Restart: If there is no indoor temperature data after 60 seconds, unplug the AC adapter and remove batteries from the alarm clock, press any button 20 times. After 15 minutes, return to **Step 1** above.

LCD Features

 
 


Set Time, Date, Temperature Unit, Language


1. Hold the **REG** button to enter time set mode.
2. Press the **+** or **-** buttons to adjust values.
3. Press the **REG** button to confirm adjustments and move to the next item.
4. Press the **SNOOZE/LUM.** button at any time to exit.

TIME SET ORDER:

1. Beep ON/OFF
2. Time format (24h/12h)
3. Hour
4. Minutes
5. Year
6. Month
7. Date
8. Date/Month Format (D/M or M/D)
9. Fahrenheit/Celsius




 Press the **SNOOZE/LUM.** button at any time to exit, or wait 20 seconds without pressing buttons to return to the normal time display.

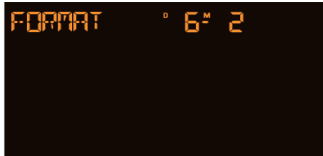

SET DATE/MONTH FORMAT

 SET TEMPERATURE°C/°F

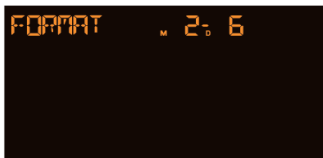

USB Charging Port, Audio IN

Charge a smart phone, camera or other devices when the alarm clock is plugged into a power outlet with the included 5V AC adapter.

Note: This is a power-output charging port (SORTIE). It does not supply power to the alarm clock.

- Connect your external device's USB charging cable (not included) to the USB charging port.
- Charging times will vary.
- **USB Power Output:** 1A maximum current. Charge 1A devices or devices that are self-regulating.
- 3.5mm AUDIO IN, when audio in, the BT will disconnect



Bluetooth Operation

1. Press and hold **BLUETOOTH® POWER** to turn on the Bluetooth function.
2. Activate the Bluetooth® function on your mobile device to pair with the clock.
3. The purple LED will flash until there is connection with your mobile device. Once there is connection, the purple LED will change to blue and will be solid.
4. Use the ▲ or ▼ buttons on top to adjust the volume.
5. If a phone call is made or received, the Bluetooth® connection will be temporarily interrupted. It will automatically reconnect after the call.
6. Press Bluetooth Power to pause and repress and continue to play
7. Press and hold the **BLUETOOTH® POWER** button again to turn off BT.



Note: If the clock is unplugged briefly and is plugged in again, the clock may lose Bluetooth connectivity.

Adjust Backlight HI/LOW/OFF

For a constant backlight you must use the AC adapter.

When using A/C power:

Press the **SNOOZE/LUM.** button to adjust the backlight between bright, dim and off.



When using battery power only:

Press the **SNOOZE/LUM.** button for 10 second backlight

Time Alarm Options-Single, M-F or Weekend

- Your clock has two separate alarms (1 & 2).
- Each alarm can be set one time (Day Alarm), Monday-Friday, or for Weekends.

Alarm Type	Words
One Time	ALARME
Monday-Friday	LUN-VEN
Weekend only	WEEKEND

Set Time Alarm 1 & Alarm 2

Setting the alarm and activating the alarm are separate actions.

Alarm Time setting order: 1. Hours, 2. Minutes



Alarm 1:

- Hold the **ALARM** button for 3 seconds to enter alarm time set mode.
- Press the **+** or **-** buttons to adjust the alarm hour.
- Press the **ALARM** button to confirm and set the minutes.
- Press the **+** or **-** buttons to adjust the alarm minutes.
- Press the **ALARM** button to confirm and set the ALARM TYPE
- Press the **+** or **-** buttons to choose alarm type
- Press the **ALARM** button to confirm and set the ALARM SOUND
- Press the **ALARM** button to confirm.

Alarm 2:

Repeat steps 1-8 using ALARM 2 button.

ALARM1 HOUR



ALARM1 MINUTES



ALARM1 TYPE



ALARM1 SOUND



Deactivate Time Alarm 1 or Time Alarm 2

Press and release the **ALARM 1** or **ALARM 2** button to deactivate the specific alarm.

Snooze (Silences Alarm Temporarily)

When alarm sounds, press the **SNOOZE/LUM.** button to silence either alarm for 10 minutes.



Note: The alarm sounds for 2 minutes and then shut off completely.

Low Battery Icon


When the icon is displayed below the time, replace batteries in the alarm clock.

Low
Battery



MOON PHASE

 The moon phase is based on the lunar calendar and the year, month and date set. Most Internet moon phase calculations are based on the lunar calendar.



NEW

WAXING
CRESCENT

FIRST
QUARTER

WAXING
GIBBOUS

FULL

WANING
GIBBOUS

LAST
QUARTER

WANING
CRESCENT

ALARM CLOCK CARE AND MAINTENANCE

- Do not mix old and new batteries
- Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries

- Always purchase the correct size and grade of battery most suitable for intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed with correct polarity (+and -).
- Remove batteries from equipment which is not to be used for an extended period of time.
- Remove expired batteries promptly.
- Do not expose to extreme temperature, vibration or shock.
- Clean with a soft damp cloth. Do not use solvents or scouring agents.
- The alarm clock is not a toy. Keep it out of reach of children.
- The alarm clock is not to be used for medical purpose or for public information. It is intended for home use only.
- The specs of this alarm clock may change without prior notice.
- Improper use or unauthorized opening of housing voids warranty.
- If the alarm clock is not working properly, change the batteries and/or check the A/C adapter connection.

SPECIFICATIONS

Indoor:

Temperature Range: +32°F to +122°F (0°C to 50°C)

Humidity Range: 1% to 99% RH

Power:

Alarm Clock: A/C power adapter (included) 5.0V
HX18-0502000-AG

Battery backup; 2-AA, IEC, LR6 batteries (not included)

Battery Life:

Battery Backup: Battery life is over 24 months when using the AC adapter for primary power

USB:

Output: 1 Amp maximum current (charging cable not included)

Dimensions:

Alarm Clock: 143 x 75 x 70 mm (5.63" L x 2.95" D x 2.76 " H)

LIABILITY DISCLAIMER

- The electrical and electronic wastes contain hazardous substances. Disposal of electronic waste in wild country and/or in unauthorized grounds strongly damages the environment.
- Please contact your local or/and regional authorities to retrieve the addresses of legal dumping grounds with selective collection.
- All electronic instruments must from now on be recycled. User shall take an active part in the reuse, recycling and recovery of the electrical and electronic waste.
- The unrestricted disposal of electronic waste may do harm on public health and the quality of environment.
- As stated on the gift box and labeled on the product, reading the "User manual" is highly recommended for the benefit of the user. This product must however not be thrown in general rubbish collection points.
- The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.
- This product is designed for use in the home only as indication of the temperature.
- This product is not to be used for medical purposes or for public information.
- The specifications of this product may change without prior notice.
- This product is not a toy. Keep out of the reach of children.
- No part of this manual may be reproduced without written authorization of the manufacturer.



R&TTE Directive 1999/5/EC

Summary of the Declaration of Conformity : We hereby declare that this wireless transmission device does comply with the essential requirements of R&TTE Directive 1999/5/EC.