

Projection Time Alarm

FRONT

 
Time

12:34



Projection Arm
Adjustable

Calendar or
Alarm Time

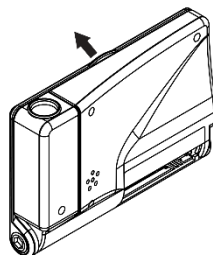

Clock Closed
Pull firmly to open.

BUTTONS

ALARME

SNOOZE
ECLAIRAGE
(HA-BAS-OFF)

▲ + | ↻

 
 
MODE/REG

▼ -

Micro-USB port
to operate clock

Foldout
Stand Open

Standard USB
Output 1A for charging
mobile devices

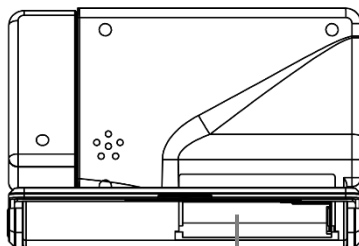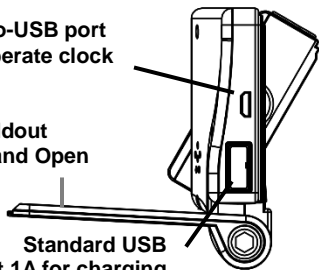

Battery compartment
2-“AAA” batteries

GET STARTED

Step 1: With the cover/stand closed, insert 2 new“AAA” batteries (not included) into the back of projection alarm. Observe correct polarity.

Step 2: Looking at the top of the clock, firmly pull the cover/stand open to view the clock.

Step 3: Optional Micro-USB power cord (included) for constant, adjustable backlight and projection.

Insert the Micro-USB end of the cord into the clock and the USB end into your computer USB port or a USB outlet (not included).

 
Restart: Unplug the Micro-USB cord and remove batteries from the projection alarm, press a button 20 times. After 15 minutes, return to **Step 1** above.

SET TIME AND DATE

1. Hold the **MODE/REG** button to enter time set mode.
2. Use the **▲+** or **▼-** buttons to adjust values.
Press and hold those buttons for fast adjustment.
3. Press the **MODE/REG** button to confirm adjustments and move to the next item.

Time and Date setting order:

1. 12/24 Hour Time Format
2. Hour
3. Minutes
4. Year
5. Month
6. Date

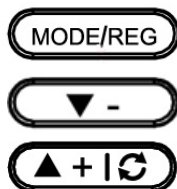


Note: Day of the week sets automatically when year, month and date are set.

Press the **MODE/REG** button to exit, or wait 20 seconds without pressing buttons to return to the normal time display.

SET TIME ALARM

 1. Press the **ALARME** button to view the alarm time, in alarm mode.
2. In alarm mode, hold the **ALARME** button to enter alarm time set mode.
3. Use the **▲+** or **▼-** buttons to adjust values.

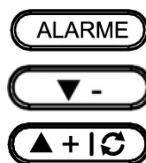

4. Press the **ALARME** button to confirm adjustments and move to the next item.

Alarm Time setting order:

1. Hours
2. Minutes



 
ACTIVATE/DEACTIVATE TIME ALARM

- Press the **ALARME** button once to view alarm time.
- Press the **ALARME** button again to activate the alarm. Bell icon appears.
- Press the **ALARME** button again to deactivate the alarm. The bell icon disappears.



SNOOZE (Silences alarm temporarily)

- Press the **SNOOZE/ECLAIRAGE** button to silence alarm for 10 minutes.
- **Zz** will show above the time.
- When in snooze mode, press **SNOOZE/ECLAIRAGE** to stop alarm for one day.



Note: The alarm is crescendo sound. The alarm will sound for 2 minutes and then shut off completely.

CALENDAR OR ALARM TIME DISPLAY

 
- Press the **MODE/REG** button to select Alarm Time or Calendar to be displayed.



BACKLIGHT BRIGHTNESS-MICRO-USB POWER

Press and release the **SNOOZE/ECLAIRAGE** button to adjust the brightness of the backlight:

- ON Bright (HA)
- ON Dim (BAS)
- OFF



Note: When the Micro-USB cord is NOT in use, the High/Low/Off (HA-BAS-OFF) features are not available.

When operating on battery power only, press the **SNOOZE/ECLAIRAGE** button for a 10 second backlight and projection. The projection will not stay on with battery power only.

PROJECTION (rotate, projection arm)

 
Battery Power: Press and release the **SNOOZE/ECLAIRAGE** button to show the projection for 10 seconds.

SNOOZE
ECLAIRAGE
(HA-BAS-OFF)

Micro-USB Cord: Projection is displayed constantly.

Note: Projection will not display constantly when operating on battery power only.

Rotate Projection:



- Press the **▲+** button to rotate the projection image 90 degrees.
- Press the **▲+** button again to rotate another 90 degrees.
- Continue until the projected image is right side up.

Projection Arm: The projection arm will move forward or backward so you can project on the wall or ceiling.

USB CHARGE PORT

Charge a smart phone, camera or other devices when the clock is plugged into a USB outlet with the Micro-USB cord.

 
Note: This is a power-output charging port. It does not supply power to the clock.

- Use the Micro-USB cord to connect the clock to a USB power outlet (not included) or your computer.

Note: You cannot charge mobile devices when operating the clock on battery power only.

- Connect your mobile device's USB charging cable (not included) to the USB charging port.
- Charging times will vary.
- USB Power Output: 1.0A maximum current. Charge 1.0A devices or devices that are self-regulating.

Note: Most USB cables included with mobile devices will work for charging. Some USB cables sold with a mobile device, are for data transfer only and cannot be used for charging. Make sure that the USB cable you use will charge your mobile device.

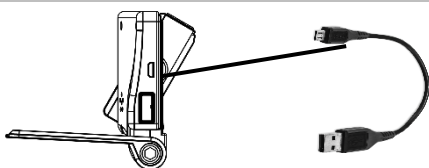

CARE AND MAINTENANCE

- **Do not mix old and new batteries**
- **Do not mix Alkaline, Standard, Lithium or Rechargeable Batteries**
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed correctly with regard to polarity (+and -).
- Remove batteries from equipment when is not to be used for an extended period of time.
- Remove used batteries promptly.
- Do not expose to extreme temperature, vibration or shock.
- Clean with a soft damp cloth. Do not use solvents or scouring agents.
- The product is not a toy. Keep it out of reach of children.
- The product is not to be used for medical purpose or for public information. It is intended for home use only.
- The specs of this product may change without prior notice.
- Improper use or unauthorized opening of housing voids warranty.
- If the product is not working properly, change the batteries.

SPECIFICATIONS

USB Charging Port	
USB Output:	1.0 Amp maximum current
Power:	
USB/Micro-USB cable	Micro-USB to USB outlet (included) USB outlet or plug (not included)
Batteries	2-AAA, IEC, LR3 batteries (not included)
Battery Life:	
Projection Alarm	Battery life is over 12months with reputable battery brands.
Dimensions:	
Projection Alarm Open:	4.5" L x 3" W x 3" H (114.3 x 76.2 x 76.2 mm)
Closed	4.5"L x 0.94" W x 3"H (114.3 x 24 x 76.2mm)

LIABILITY DISCLAIMER

- The electrical and electronic wastes contain hazardous substances. Disposal of electronic waste in wild country and/or in unauthorized grounds strongly damages the environment.
- Please contact your local or/and regional authorities to retrieve the addresses of legal dumping grounds with selective collection.
- All electronic instruments must from now on be recycled. User shall take an active part in the reuse, recycling and recovery of the electrical and electronic waste.
- The unrestricted disposal of electronic waste may do harm on public health and the quality of environment.
- As stated on the gift box and labeled on the product, reading the "User manual" is highly recommended for the benefit of the user. This product must however not be thrown in general rubbish collection points.
- The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.
- This product is designed for use in the home only as indication of the temperature.
- This product is not to be used for medical purposes or for public information.
- The specifications of this product may change without prior notice.
- This product is not a toy. Keep out of the reach of children.
- No part of this manual may be reproduced without written authorization of the manufacturer.



R&TTE Directive 1999/5/EC

Summary of the Declaration of Conformity : We hereby declare that this wireless transmission device does comply with the essential requirements of R&TTE Directive 1999/5/EC.