


## Instruction manual WT-182

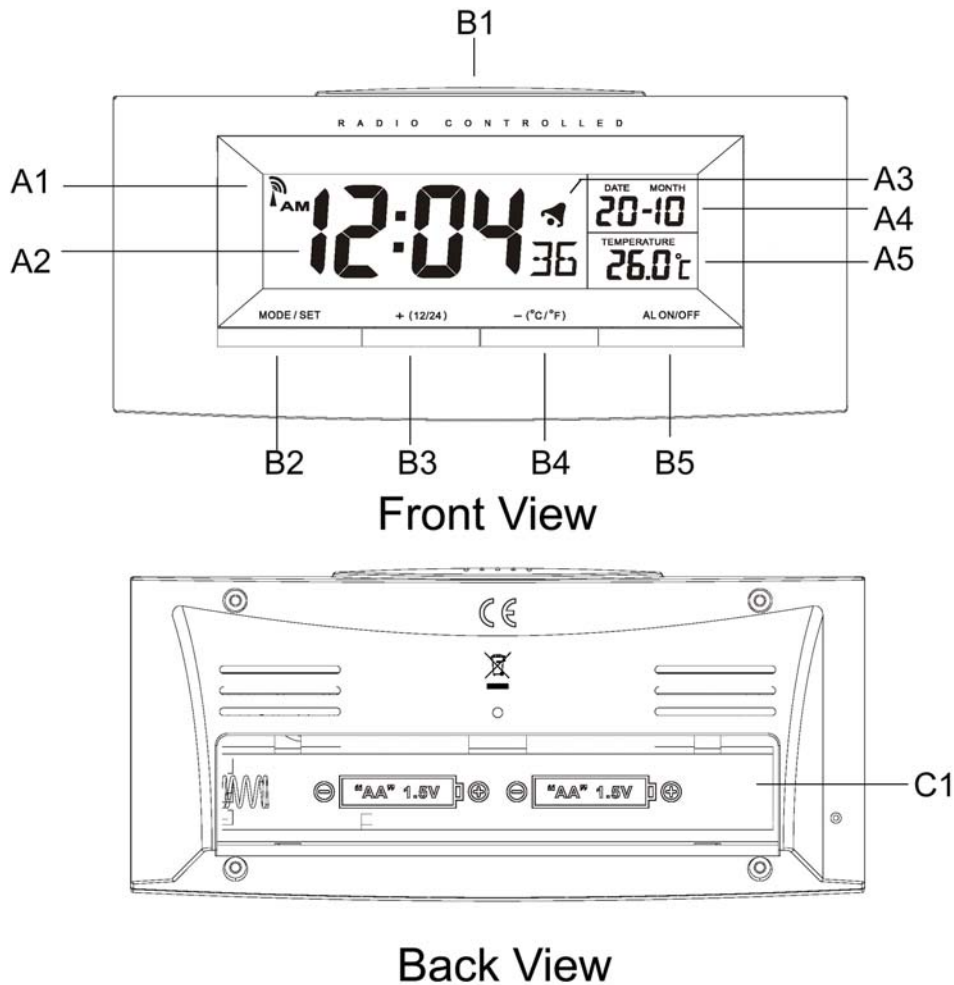

### Part A - LCD

A1: Radio Controlled Clock icon

A2 : Radio Controlled Clock

A3: Alarm icon

A4: Month and Date

A5: Temperature

### Part B- Button

B1: “SNOOZE/PROJECTION/LIGHT” button

B2: “MODE/SET” button

B3: “+(12/24)” button




B4: “-(C/F)” button


B5: “AL ON/OFF” button

### Part C - Structure

C1: Battery Compartment

### Radio Controlled Time:

- The clock automatically starts scanning the DCF time signal (  flashes on the LCD)
- The clock automatically scans the time signal at 3:00a.m. everyday to maintain accurate timing. For failed reception, scanning stops (  on LCD disappear) and repeats again at 4:00a.m, 5:00a.m, and 6:00a.m.
- The clock manually scans the time signal by holding buttons “+”(B3) & “-“(B4).  
For failed reception, scanning stops (  on LCD disappear) and repeats again in the next 4 hours (4 times) until received. e.g. scan at 8:20 failed, it will received again at 9:00; 10:00; 11:00; 12:00.
- Stop scanning by holding “+”(B3) & “-“(B4)buttons.

\*  flashes indicate now is receiving the DCF signal



turns on indicate signal received successfully

“DST” show on the LCD if it is in Daylight Saving Time Mode.



### Manual Time Setting:

- Press “MODE”(B2) button to change the display content:  
Radio Controlled Time → Time + week → Alarm Time
- When the Time is displayed on LCD, hold “MODE” button for 2 seconds to enter Time setting mode.
- Press or hold “+”(B3) & “-“(B4) to adjust the Hour, Minutes, Time Zone, Language of week day, Year, Month and Day.
- Press “MODE” (B2)button to confirm each setting
- The TIME SETTING mode will automatically exit in 8 sec without any adjustment.
- 7 languages can be selected in Day-of-week, they are: German, English, Denmark, Dutch, French, Italian and Spanish. The languages and their selected abbreviations for each day of the week are shown in the following table.

Language	Sunday	Monday	Tuesday	Wednesday	Thursday	Friday	Saturday
German, GE	SO	MO	DI	MI	DO	FR	SA
English, EN	SU	MO	TU	WE	TH	FR	SA
French, FR	DI	LU	MA	ME	JE	VE	SA
Italian, IT	DO	LU	MA	ME	GI	VE	SA
Spanish, ES	DO	LU	MA	MI	JU	VI	SA
Dutch, NE	ZO	MA	DI	WO	DO	VR	ZA
Denmark, DA	SO	MA	TI	ON	TO	FR	LO

- The Time zone is used for the countries where can receive the DCF time signal but the time zone is different from the German time.
- When the country time is faster than the German time for 1 hr, the zone should be set to +1. Then the clock will automatically set 1 hour faster from the signal time received.

#### **Snooze Alarm Clock Function:**

- Press “AL ON/OFF” (B5)button to switch the alarm on. “” appears on the LCD.
- Press “MODE” (B2)button twice to turn to Alarm Time Display, hold “MODE”(B2) button 2 seconds (Hr digit blink) to enter Alarm Time setting mode. Press “+” (B3)or “-” (B4) buttons to adjust the Alarm Time.
- Press “SNOOZE/ PROJECTION/LIGHT” (B1)button when alarm is alerted. The alarm snoozes for 8 minutes, then it alerts again
- Press “AL ON/OFF” (B5) button to switch off the alarm. (“” disappear)

#### **Thermometer:**

- Press “°C/°F”(B4) button to select thermometer in Celsius/Fahrenheit mode

#### **12/24 Hr:**

- Press “ 12/24”(B3) button to select 12 or 24 hours mode.

#### **Back Light:**

- Press “SNOOZE/ PROJECTION/ LIGHT”(B1) button , back light states for 5 seconds