

### Display Outdoor Temperature or Seconds

This versatile clock allows you to display outdoor temperature or seconds counting in the outdoor temperature area. Press the + button to toggle between outdoor temperature, or seconds. Clock will stay on selected option.

#### Setup

1. Insert 2-AA LR6 batteries into the clock.
2. Insert 2-AA LR6 batteries into the TX191 sensor according to polarity.
3. After 5 minutes place sensor in a shaded outdoor location.
4. Set time and date.

#### Atomic Time Signal

- Once batteries are installed, the clock will automatically search for the atomic time signal at 1:00am, 2:00am, 3:00am every day, if it cannot receive at above time, it will try to receive at 4:00am or 5:00am, if it still cannot receive at 4:00am or 5:00am, it will stop receiving until next day.
- From normal time display, press and release the REG button to search for the DCF signal.
- Please be sure you have selected your time zone from the list in the Settings menu. When the Atomic time signal is received, the clock will set to the time zone selected. Default is 0H.

#### Settings: Time, Date, etc.

Note: Only press one button at a time when setting.

- Hold then release the REG button to enter time set mode.
- Press and release the + or - buttons to adjust the values. Hold to adjust quickly.
- Press and release the REG button to confirm and move to the next tem.
- Press and release the SNOOZE button at any time to exit.


#### Time set order:

1. Language
2. Beep ON/OFF
3. RCC ON/OFF
4. Time Zone
5. 12/24hour timeformat
6. Hour
7. Minutes
8. Year
9. Month
10. Date
11. Celsius/Fahrenheit


**To begin:** Hold the REG button 3 seconds, then release, to enter the settings menu:

**FRANCAIS** will flash, press the +/- buttons to select ENGLISH for language


**Model: WS8020** **www.lacrosstechnology.fr** **Page 2**

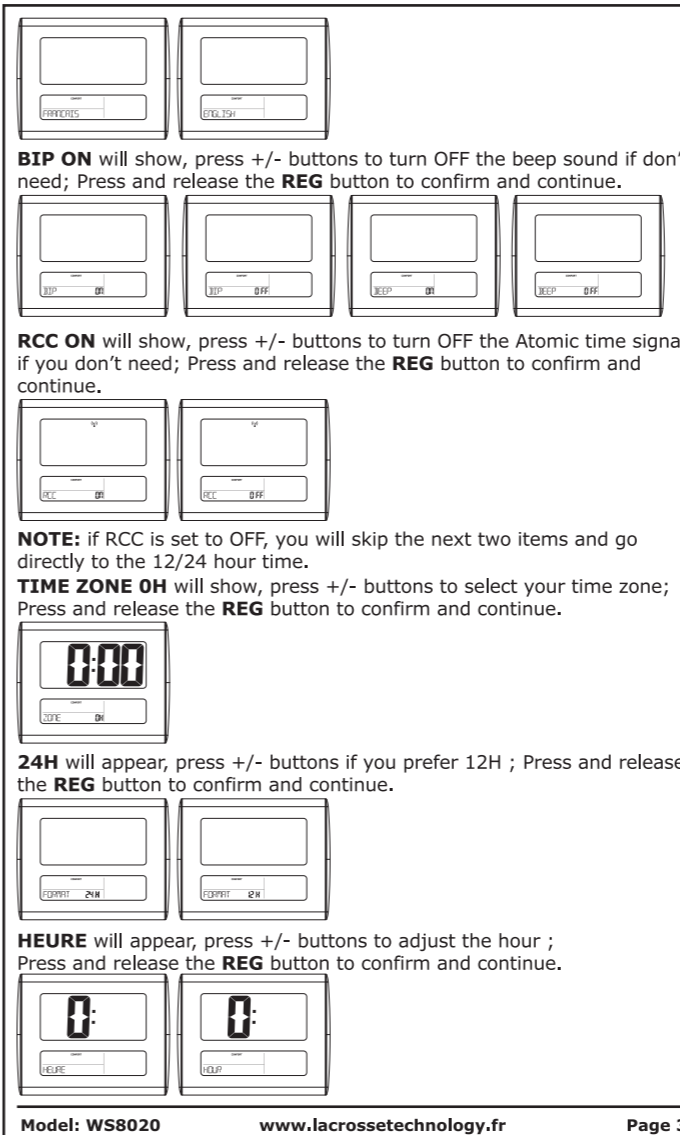


**MINUTES** will appear, press +/- buttons to adjust the minutes ; Press and release the REG button to confirm and continue.

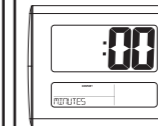


**ANNEE** will appear, press +/- buttons to adjust the year ; Press and release the REG button to confirm and continue.

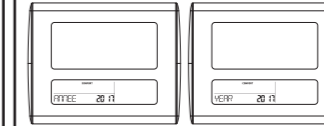

**MOIS** will appear, press +/- buttons to adjust the month ; Press and release the REG button to confirm and continue.

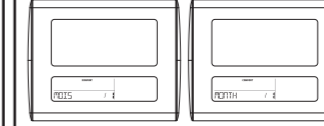

**DATE** will appear, press +/- buttons to adjust the date ; Press and release the REG button to confirm and continue.

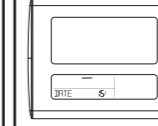


**TEMP C** will appear, press +/- buttons to select F ; Press and release the REG button to confirm and exit.



#### Note:

1. if no buttons are pressed in a 20 seconds period, set mode will time out and return to live display mode, reflecting whatever adjustments were made by user before timed out
2. Press SNOOZE at any time to save and exit all setting menus
3. +/- button : Press once to adjust by 1 unit, hold for fast scroll adjustment.

**Model: WS8020** **www.lacrosstechnology.fr** **Page 4**

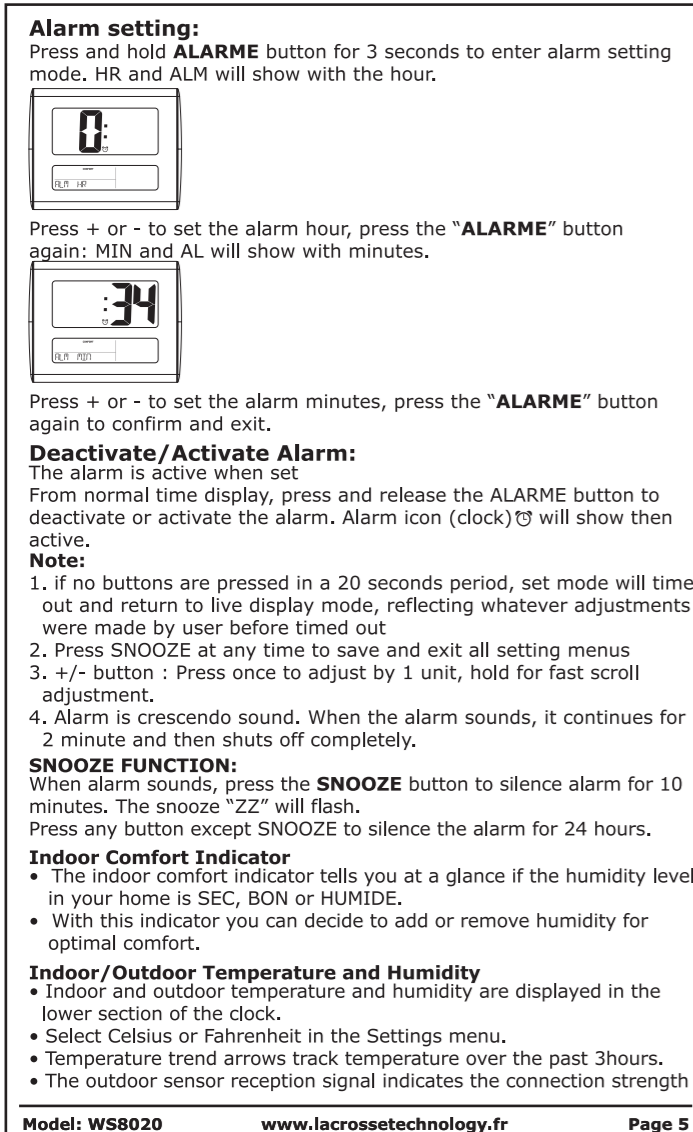

between sensor and clock.

#### Temperature Trend Arrows

The outdoor temperature (2°F/ 1°C) trend indicators update every 30 minutes or less. This provides a 3 hour comparison which changes on every ½ hour:

Example: At 3:00 - compare to 12:00 data;  
At 3:30-compare to 12:30....etc.

#### Sensor Reception

- Hold the - button 3 seconds to search for the sensor.
- The strength signal icon will flash until the sensor signal is received Or for 3 minutes if no signal available.
- The signal will show solid when connected to the sensor.

#### Low Battery Icon

- Battery icon by Time-Change batteries in the clock.

#### Mount Temperature Sensor

- Mount the outdoor sensor in well-shaded area. Under an eave or deck rail is preferred.
- The maximum wireless transmission range to the forecast station is over 300 feet (91 meters) in open air; this does not include barriers such as walls or floors.
- Be sure the outdoor sensor is mounted vertically.

#### Restart

When the outdoor readings show dashes:

- Bring the sensor in the house five feet from the station.
- Remove batteries from the sensor, and the batteries from the clock.
- Press any button 20 times.
- After 15 minutes insert batteries into the sensor, and into the clock.
- Wait 15 minutes to establish a strong connection. Place sensor outside in shaded location.

#### Care and Maintenance

- Do not mix old and new batteries.
- Do not mix Alkaline, Standard, Lithium, or Rechargeable Batteries.
- Always purchase the correct size and grade of battery most suitable for intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure the batteries are installed with correct polarity (+ and -).
- Remove batteries from equipment when it is not used for extended period.
- Promptly remove expired batteries.

**Model: WS8020** **www.lacrosstechnology.fr** **Page 6**

### Specifications

<b>Indoor Temp Range:</b> 32°F to 99°F(0°C to 37°C) When above 99F (37C), the indoor temperature will display "HA" When below 32F(0C), the indoor temperature will display "BA"
<b>Indoor Humidity Range:</b> 10% to 99%RH
<b>Outdoor Temp Range:</b> -40°F to 140°F(-40°C to 60°C)
<b>Distance:</b> Over 300ft.(91 meters) RF 433MHz (open air)
<b>Power Clock:</b> 2-AA,IEC, LR6 batteries (not included) <b>Power TX191:</b> 2-AA,IEC, LR6 batteries (not included)
<b>Battery life Clock:</b> over 12months with reputable batteries <b>Battery life TX191:</b> over 12 months with reputable batteries
<b>Dimensions Clock:</b> 9.51" W x 7.51" T x 1.0" D (24.16cm W x 19.08cm T x 2.54cm D) <b>Dimensions TX191:</b> 1.57" W x 4.49" T x 0.94" D (3.98cm W x 11.40cm T x 2.39cm D)

- The electrical and electronic wastes contain hazardous substances. Disposal of electronic waste in wild country and/or in unauthorized grounds strongly damages the environment.
- Please contact your local or/and regional authorities to retrieve the addresses of legal dumping grounds with selective collection.
- All electronic instruments must from now on be recycled. User shall take an active part in the reuse, recycling and recovery of the electrical and electronic waste.
- The unrestricted disposal of electronic waste may do harm on public health and the quality of environment.
- As stated on the gift box and labeled on the product, reading the "User manual" is highly recommended for the benefit of the user. This product must however not be thrown in general rubbish collection points.
- The manufacturer and supplier cannot accept any responsibility for any incorrect readings and any consequences that occur should an inaccurate reading take place.
- This product is designed for use in the home only as indication of the temperature.
- This product is not to be used for medical purposes or for public information.
- The specifications of this product may change without prior notice.
- This product is not a toy. Keep out of the reach of children.
- No part of this manual may be reproduced without written authorization of the manufacturer.



**Model: WS8020** **www.lacrosstechnology.fr** **Page 7**

R&TTE Directive 2014/53/EU:

Summary of the Declaration of Conformity : We hereby declare that this wireless transmission device does comply with the essential requirements of R&TTE Directive

LA CROSSE TECHNOLOGY  
6A Rue du commerce  
67118 GEISPOLSHHEIM – FRANCE

**Model: WS8020** **www.lacrosstechnology.fr** **Page 8**